

Dial Setting	Time on Mains*	Time on Solar*	24-Hour Clock
MAINS ONLY	24 hr	Never	9 10 11 12 13 14 15 16 17 16 17 18 19 20 21 21 10 21 10 21 12 13 14 15 16 17 18 19 20 21 1 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 21 10 10 10 10 10 10 10 10 10 1
1	12:00 to 08:00	08:00 to 12:00	$\begin{array}{c} & 1 & 0 & 11 & 12 & 13 & 14 \\ & 10 & 11 & 12 & 13 & 14 & 15 & 16 & 17 & 18 & 17 & 18 & 19 & 19 & 19 & 10 & 11 & 11 & 11 & 11$
2	14:30 to 05:30	05:30 to 14:30	⁹ ⁹ ⁹ ⁹ ⁹ ¹⁰ ¹¹ ¹² ¹³ ¹⁴ ¹⁵ ¹⁶ ¹⁷ ¹⁸ ¹⁹ ¹⁰ ¹⁷ ¹⁸ ¹⁹ ¹⁰ ¹⁷ ¹⁸ ¹⁹ ²⁰ ²¹ ²⁰ ²¹ ¹⁰ ²⁰ ²¹ ¹⁰ ²⁰ ²⁰ ²¹ ¹⁰ ²⁰ ²⁰ ²¹ ²⁰ ²⁰ ²¹ ²⁰ ²⁰ ²¹ ²⁰ ²⁰ ²¹ ²⁰ ²⁰ ²⁰ ²⁰ ²⁰ ²⁰ ²⁰ ²⁰
3	17:00 to 03:00	03:00 to 17:00	⁹ ¹⁰ ¹¹ ¹² ¹³ ¹⁴ ¹⁵ ¹⁶ ¹⁷ ¹⁸ ¹⁹ ¹⁰ ¹⁶ ¹⁷ ¹⁸ ¹⁹ ¹⁰ ¹¹ ¹² ¹³ ¹⁴ ¹⁵ ¹⁶ ¹⁷ ¹⁶ ¹⁷ ¹⁸ ¹⁹ ¹⁰ ¹¹ ¹² ¹³ ¹⁴ ¹⁵ ¹⁶ ¹⁷ ¹⁶ ¹⁷ ¹⁶ ¹⁷ ¹⁶ ¹⁷ ¹⁶ ¹⁷ ¹⁶ ¹⁷ ¹⁸ ¹⁹ ¹⁰ ¹¹ ¹⁰ ¹⁰ ¹¹ ¹⁰ ¹⁰ ¹¹ ¹⁰ ¹⁰
SOLAR ONLY	Never	24 hr	$\begin{array}{c} & & & & & \\ & & & & & \\ & & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & &$

* Times are approximate - will vary slightly with season and location



Mains & Solar Indicator Lights

< Attach Elon Serial Number Label Here >

	Lights	Meaning	
	Green light ON	Geyser on temperature	
*	Green light flashing	Heating with solar	
	Red light ON	Mains power available (power to Elon [®] unit on)	
	Red light flashing	Heating with mains	
	Both lights ON	Geyser is on temperature. Mains power available (mains power to Elon [®] unit on)	
*	Red light ON & Green light flashing	Heating with solar. Mains power available (mains power to Elon [®] unit on)	
棠	Red & Green light flashing fast	Isolation fault (contact electrician)	
	Both lights OFF	No power to unit (for example: no sun plus a power failure, or no sun plus geyser breaker at DB board is switched off) OR supply voltage outside specifications	

Online user instruction video:

Full user manual:



 \mathbf{i}